



TRAILER MAINTENANCE SCHEDULE

Item	Function Required	Weekly	3 Months Or 3,000 Miles	6 Months Or 6,000 Miles	12 Months Or 12,000 Mile's
Brakes	Test that they are operational	Test Before Every Use			
Brake Adjustment	Adjust to proper operating clearance		•		
Brake Magnets	Inspect for wear and current draw			•	
Brake Linings	Inspect for wear or contamination				•
Brake Controller	Check for incorrect amperage and modulation			•	
Brake Cylinders	Check for leaks, sticking				•
Brake Lines	Inspect for cracks, leaks, kinks.				•
Trailer Lights	Check to be sure all lights are working.	Test Before Every Use			
Trailer Brake Wiring	Inspect wiring for bare spots, fray, etc.				•
Breakaway System	Check battery charge and switch operation.	Test Before Every Use			
Hub/Drum	Inspect for abnormal wear or scoring.				•
Wheel Bearings and Cups	Inspect for corrosion or wear. Clean and repack.				•
Seals	Inspect for leakage. Replace if removed.				•
Springs	Inspect for wear, loss of arch.			•	
Suspension Parts	Inspect for bending, loose fasteners and wear.				•
Hangers	Inspect welds.				•
Wheels	Tighten to specified torque values.			•	
Wheel Nuts and Bolts	Inspect for cracks, dents, or distortion.		•		
Tire Inflation Pressure	Inflate tires to manufactures specifications.	•			
Tire Condition	Inspect for cuts, wear, bulging, etc.		•		